

UltraPur™ HfCl_4

Hafnium tetrachloride

Hafnium tetrachloride (HfCl_4) is a solid metallic halide used widely in the semiconductor industry as a precursor for the formation of the high- κ dielectric material Hafnium Oxide (HfO). The major applications of HfO are High- κ Metal Gate (HKMG) transistors and capacitor structures. In the case of HKMG, HfO started to supersede conventional SiO_2 from the 45 nm or 32 nm node. For the deposition process, Atomic Layer Deposition (ALD) is the major method utilized in the industry for high- κ materials. In the ALD process, HfCl_4 provides the source of Hf which, and a second precursor such as water or O_3 as the source of oxygen.



Hafnium tetrachloride is a fine powder that can be easily entrained in the carrier gas stream and result in particle defects on the wafer. Entegris has developed a proprietary process to agglomerate these particles in the vaporizer after filling to eliminate particle excursions from the precursor. The filling and post-fill processing takes place in our state-of-the-art manufacturing facility in Burnet, Texas.

Delivery System

Entegris recommends its proprietary ProE-VAP® solid precursor delivery system for optimum flux and utilization of HfCl_4 . This ampoule has an innovative design that maximizes solid precursor exposed area and heating to maximize overall mass flux and flux stability. Details of the ProE-VAP delivery system can be found on our separate data sheet. Please ask your Entegris representative.

PERFORMANCE DATA

Vapor Pressure Curve

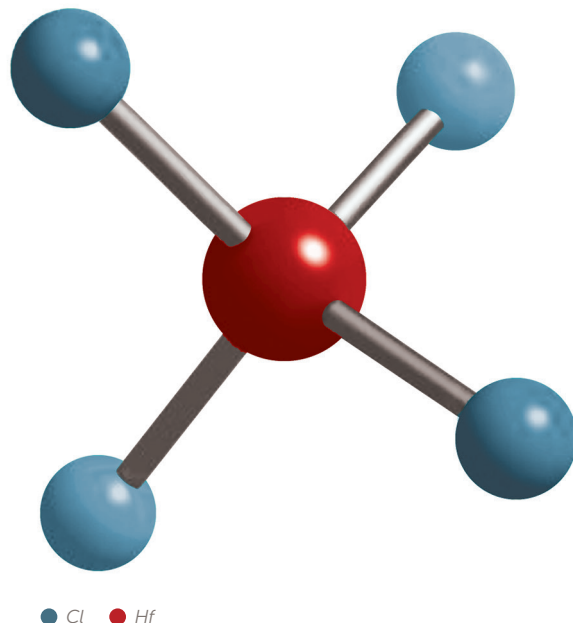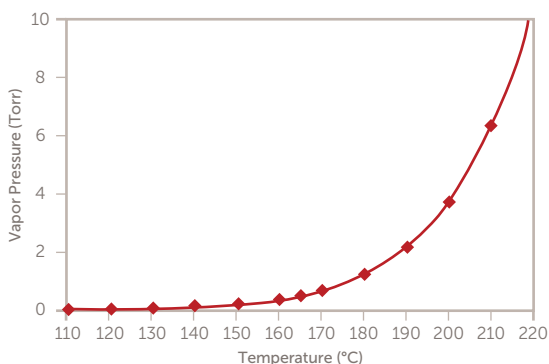

APPLICATIONS

- Precursor for HfO high- κ layer deposition for HKMG and capacitor structures – high- κ layer, ALD deposition technique.

FEATURES & BENEFITS

- Semiconductor grade purity
- Optimized ProE-VAP delivery system for solid precursor delivery
- Two-year shelf life from date of manufacturing
- Post-fill morphology treatment to eliminate particle excursions

SPECIFICATIONS

Physical properties

Chemical formula	HfCl ₄
Molecular weight	320.3
Density	3.89 g/cm ³
Melting point	432°C (806.6°F)

Purity analysis (standard grade)

Element	Detection limit	Specification	Analytical method
Aluminum	4.400 ppm	500.000 ppm	ICP-MS
Antimony	0.200 ppm	2.000 ppm	ICP-MS
Arsenic	0.300 ppm	3.000 ppm	ICP-MS
Barium	0.200 ppm	3.000 ppm	ICP-MS
Cadmium	0.200 ppm	2.000 ppm	ICP-MS
Calcium	0.300 ppm	3.000 ppm	ICP-MS
Chromium	0.300 ppm	4.000 ppm	ICP-MS
Cobalt	0.200 ppm	2.000 ppm	ICP-MS
Copper	0.200 ppm	4.000 ppm	ICP-MS
Gallium	0.200 ppm	3.000 ppm	ICP-MS
Germanium	0.200 ppm	2.000 ppm	ICP-MS
Iron	1.000 ppm	20.000 ppm	ICP-MS
Lead	0.200 ppm	4.000 ppm	ICP-MS
Lithium	0.200 ppm	2.000 ppm	ICP-MS
Magnesium	0.200 ppm	2.000 ppm	ICP-MS
Manganese	0.300 ppm	3.000 ppm	ICP-MS
Nickel	0.200 ppm	3.000 ppm	ICP-MS
Potassium	0.200 ppm	11.000 ppm	ICP-MS
Sodium	0.200 ppm	12.000 ppm	ICP-MS
Strontium	0.200 ppm	2.000 ppm	ICP-MS

Purity analysis (standard grade) (continued)

Element	Detection limit	Specification	Analytical method
Tin	0.200 ppm	2.000 ppm	ICP-MS
Titanium	0.400 ppm	63.000 ppm	ICP-MS
Tungsten	0.200 ppm	2.000 ppm	ICP-MS
Uranium	0.300 ppm	13.000 ppm	ICP-MS
Zinc	0.400 ppm	150.000 ppm	ICP-MS
Zirconium	7.500 ppm	2000.000 ppm	ICP-MS
Parameter	Specification	Analytical method	
Purity	99.700%	ICP-MS	

Purity analysis (UHP grade)

Element	Detection limit	Specification	Analytical method
Aluminum	4.400 ppm	140.000 ppm	ICP-MS
Antimony	0.200 ppm	2.000 ppm	ICP-MS
Arsenic	0.300 ppm	2.000 ppm	ICP-MS
Barium	0.200 ppm	2.000 ppm	ICP-MS
Cadmium	0.200 ppm	2.000 ppm	ICP-MS
Calcium	0.300 ppm	3.000 ppm	ICP-MS
Chromium	0.300 ppm	3.000 ppm	ICP-MS
Cobalt	0.200 ppm	2.000 ppm	ICP-MS
Copper	0.200 ppm	2.000 ppm	ICP-MS
Gallium	0.200 ppm	2.000 ppm	ICP-MS
Germanium	0.200 ppm	2.000 ppm	ICP-MS
Iron	1.000 ppm	10.000 ppm	ICP-MS
Lead	0.200 ppm	2.000 ppm	ICP-MS
Lithium	0.200 ppm	2.000 ppm	ICP-MS
Magnesium	0.200 ppm	2.000 ppm	ICP-MS

Purity analysis (UHP grade) (continued)

Element	Detection limit	Specification	Analytical method
Manganese	0.300 ppm	3.000 ppm	ICP-MS
Nickel	0.200 ppm	2.000 ppm	ICP-MS
Potassium	0.200 ppm	5.000 ppm	ICP-MS
Sodium	0.200 ppm	10.000 ppm	ICP-MS
Strontium	0.200 ppm	2.000 ppm	ICP-MS
Tin	0.200 ppm	2.000 ppm	ICP-MS
Titanium	0.400 ppm	10.000 ppm	ICP-MS
Tungsten	0.200 ppm	2.000 ppm	ICP-MS
Uranium	0.300 ppm	4.000 ppm	ICP-MS
Zinc	0.400 ppm	4.000 ppm	ICP-MS
Zirconium	7.500 ppm	500.000 ppm	ICP-MS

Parameter	Specification	Analytical method
Purity	99.700%	ICP-MS

FOR MORE INFORMATION

Please call your Regional Customer Service Center today to learn what Entegris can do for you. Visit entegris.com and select the [Contact Us](#) link to find the customer service center nearest you.

TERMS AND CONDITIONS OF SALE

All purchases are subject to Entegris' Terms and Conditions of Sale. To view and print this information, visit entegris.com and select the [Terms & Conditions](#) link in the footer.



Corporate Headquarters

129 Concord Road
Billerica, MA 01821
USA

Customer Service

Tel +1 952 556 4181
Fax +1 952 556 8022
Toll Free 800 394 4083

Entegris®, the Entegris Rings Design®, and other product names are trademarks of Entegris, Inc. as listed on entegris.com/trademarks. All third-party product names, logos, and company names are trademarks or registered trademarks of their respective owners. Use of them does not imply any affiliation, sponsorship, or endorsement by the trademark owner.

©2016-2019 Entegris, Inc. | All rights reserved. | Printed in the USA | 7408-7952ENT-0519