

Guardian™ DEV and Guardian Plus HPM Cartridge and Disposable Filters

High retention, hydrophilic UPE membrane filters for KOH and TMAH based developer solutions and other high pH chemical filtration applications


Guardian™ DEV and Guardian Plus HPM filters provide high retention efficiency in KOH and TMAH based developer solution and low temperature organic resist strippers (without peroxide). In addition the filter's large surface area provides high flow performance and extended lifetime.

Improved Equipment Efficiency, Reduced Maintenance, Fast Start-Up


The Guardian DEV and Guardian Plus HPM filters arrive ready-to-use for maximum system uptime. The patented hydrophilic membrane (UPE) requires no prewetting and no flushing for operation in aqueous solutions. The membrane does not dewet in aqueous solutions. The cartridges deliver quick flush up time and excellent flow/retention characteristics.

Superior Cleanliness, High Flow

The large surface area of both filters provides high particle retention of small particles without sacrificing flow. The filters are rigorously flushed and cleaned during the manufacturing process to ensure an ultra-clean product that meets the demands of today's critical semiconductor processes.

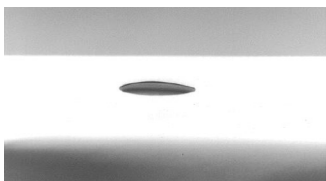

Aqueous chemistries instantly wet hydrophilic UPE membrane.

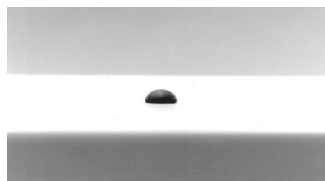

PTFE membrane resists instantaneous wetting.



FEATURES & BENEFITS

Patented hydrophilic UPE membrane	<p>Superior wettability eliminates prewetting and flushing steps, saving time at changeout.</p> <p>Does not dewet in outgassing fluids.</p> <p>Increases equipment uptime.</p>
Available in retention ratings of 0.05 µm and 0.1 µm	<p>Multiple retention ratings cover a broad scope of process requirements.</p> <p>Delivers excellent small particle retention; ensures minimal particles on wafer.</p>
Large membrane surface area	<p>Enables high flow rates in chemical delivery systems, while maintaining excellent ultrafine particle retention.</p> <p>Provides longer life, more efficient filtration.</p>
Polyethylene construction	<p>Provides excellent chemical compatibility and long lifetime in a cost-effective device</p>


SPECIFICATIONS

		GUARDIAN DEV	GUARDIAN PLUS HPM	GUARDIAN DEV HPX DISPOSABLE
Materials	Membrane	Patented hydrophilic ultra-high molecular weight polyethylene (UPE)		
	Supports, sleeve, core, end caps	High-density polyethylene (HDPE)		
	Code 0 double 2-222 O-ring	EP, E-FKM, Kalrez® 4079 Kalrez 6375	E-FKM, FER	—
	Chem-Line™ II disposable outer shell	—	—	Polypropylene
Retention rating		0.05, 0.1 µm		
Membrane surface area		10": 0.85 m ²	10": 1.9 m ²	10": 1.1 m ²
		20": 1.7 m ²	20": 3.8 m ²	—
		30": 2.55 m ²	30": 5.7 m ²	—
Maximum operating conditions	Maximum forward differential pressure	0.35 MPa (3.5 bar; 50 psid) @ 25°C (77°F)	0.24 MPa (2.4 bar; 35 psid) @ 25°C (77°F)	0.35 MPa (3.5 bar; 50 psid) @ 20°C (68°F)
	Maximum reverse differential pressure	0.25 MPa (2.5 bar; 35 psid) @ 25°C (77°F)	0.24 MPa (2.4 bar; 35 psid) @ 25°C (77°F)	0.25 MPa (2.5 bar; 35 psid) @ 20°C (68°F)
	Maximum inlet pressure	—	0.34 MPa (3.4 bar; 50 psi) @ 25°C (77°F)	0.69 MPa (6.9 bar; 100 psi) @ 20°C (68°F)
	Maximum operating temperature	60°C (140°F)		
Compatibility	Recommended for use in ammonium hydroxide and TMAH and low-temperature organic resist strippers. Not recommended in chemistries with peroxide or aromatic hydrocarbons.			

Guardian DEV Cartridge Filters


DIMENSIONS

End View Chemlock® Key on Cartridge

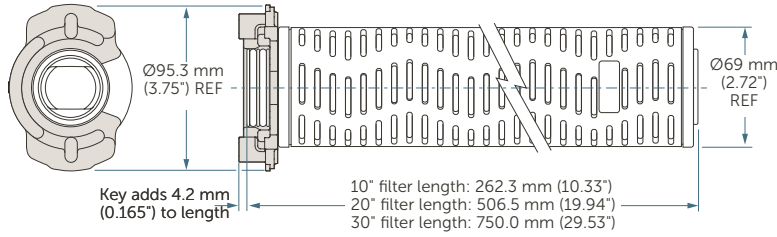


PERFORMANCE DATA


Guardian DEV 10" Cartridge Filters

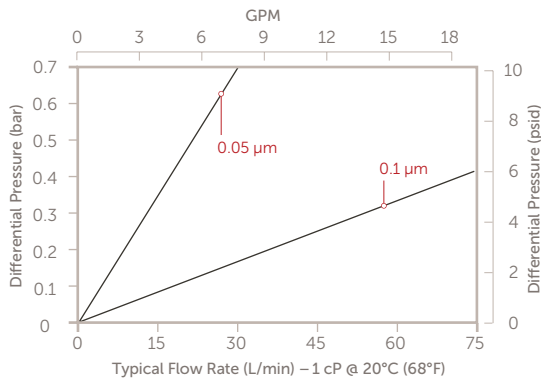

Guardian DEV 30" Cartridge Filters

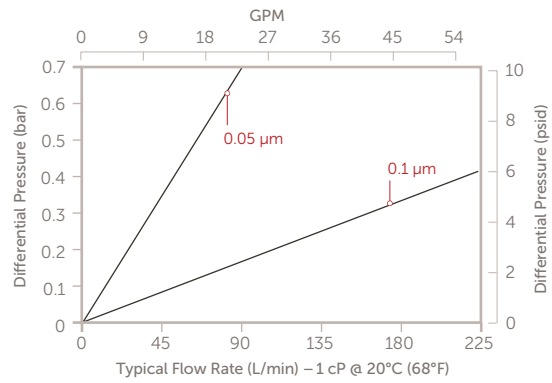


Guardian DEV 20" Cartridge Filters

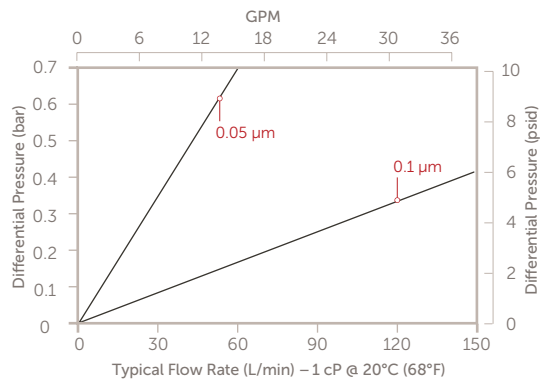

Guardian Plus HPM Cartridge Filters


DIMENSIONS

End View Chemlock Key on Cartridge

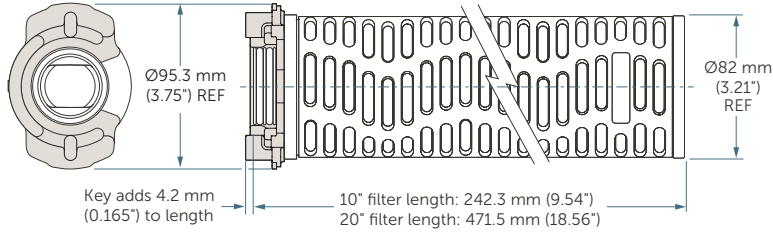


PERFORMANCE DATA

Guardian Plus HPM 10" Cartridge Filters

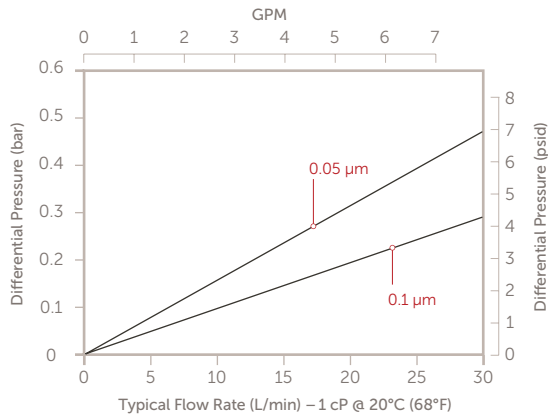


Guardian Plus HPM 20" Cartridge Filters

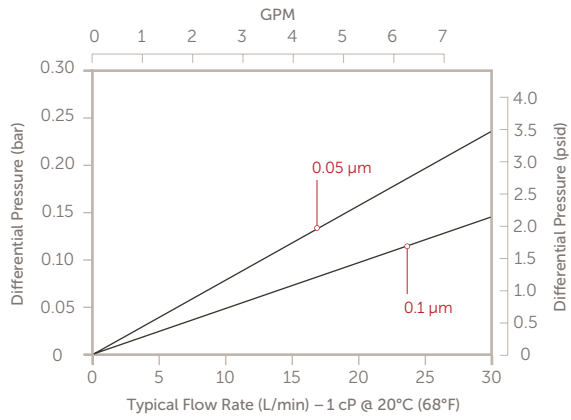

Guardian DEV Disposable Filters

DIMENSIONS


Chem-Line II Disposable Filter

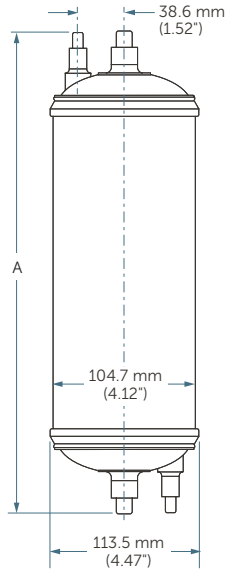


A	
Inlet/Outlet size	10" Disposable filter with Flaretek® compatible fittings
3/8"	349.8 mm ±1.3 mm (13.77" ±0.05")
1/2"	359.9 mm ±1.3 mm (14.17" ±0.05")
3/4"	359.9 mm ±1.3 mm (14.17" ±0.05")
1"	370.1 mm ±1.3 mm (14.57" ±0.05")

PERFORMANCE DATA


Guardian DEV 10" Disposable Cartridge Filters with 3/8" Flaretek Fittings

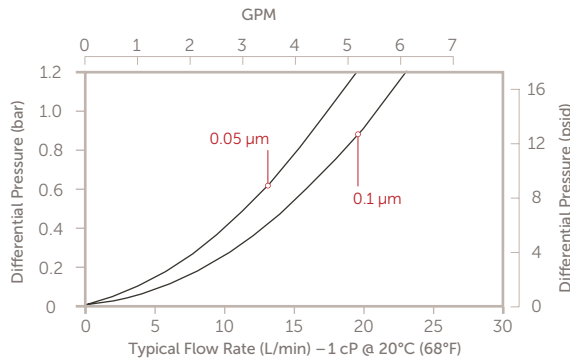


Guardian DEV 10" Disposable Cartridge Filters with 3/4" Flaretek Fittings

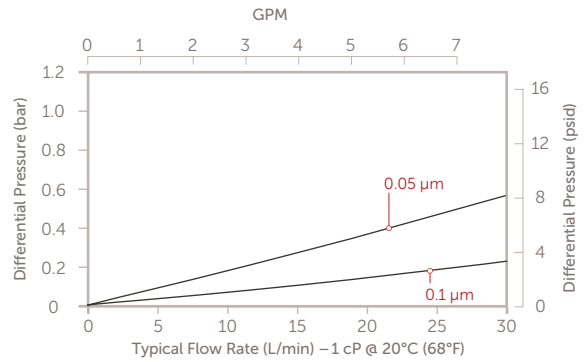

Guardian DEV 10" Disposable Cartridge Filters with 1/2" Flaretek Fittings

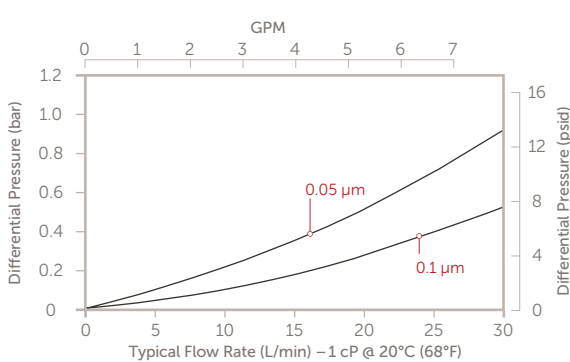


Guardian DEV 10" Disposable Cartridge Filters with 1" Flaretek Fittings

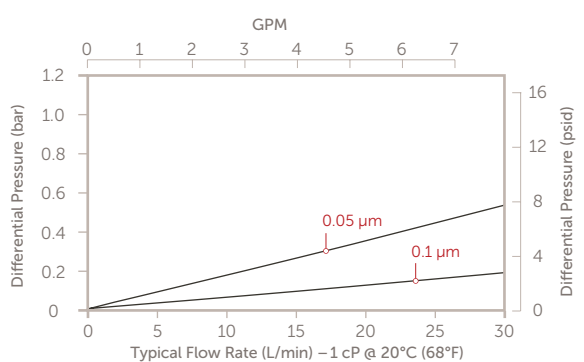


ORDERING INFORMATION


Guardian DEV Cartridge Filters: part number

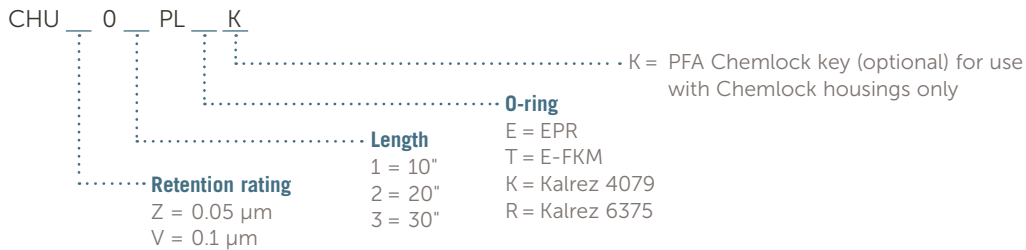

Guardian Plus HPM Cartridge Filters: part number

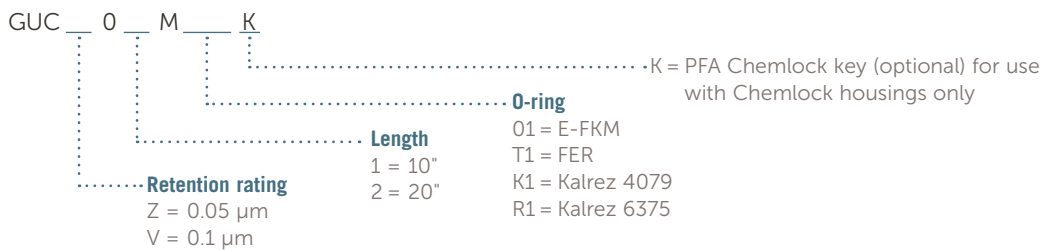

Guardian Plus Chem-Line II Filters: Part Number

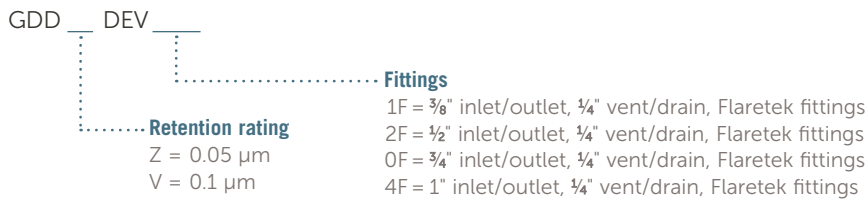

FOR MORE INFORMATION

Please call your Regional Customer Service Center today to learn what Entegris can do for you. Visit entegris.com and select the [Contact Us](#) link to find the customer service center nearest you.

TERMS AND CONDITIONS OF SALE

All purchases are subject to Entegris' Terms and Conditions of Sale. To view and print this information, visit entegris.com and select the [Terms & Conditions](#) link in the footer.



Corporate Headquarters
 129 Concord Road
 Billerica, MA 01821
 USA

Customer Service
 Tel +1 952 556 4181
 Fax +1 952 556 8022
 Toll Free 800 394 4083

Entegris®, the Entegris Rings Design®, and other product names are trademarks of Entegris, Inc. as listed on entegris.com/trademarks. All third-party product names, logos, and company names are trademarks or registered trademarks of their respective owners. Use of them does not imply any affiliation, sponsorship, or endorsement by the trademark owner.

©2012-2018 Entegris, Inc. | All rights reserved. | Printed in the USA | 4420-7035ENT-1018