


Sentry[®] QCIII Quick Connect System

*Dispense head o-ring
replacement procedure*

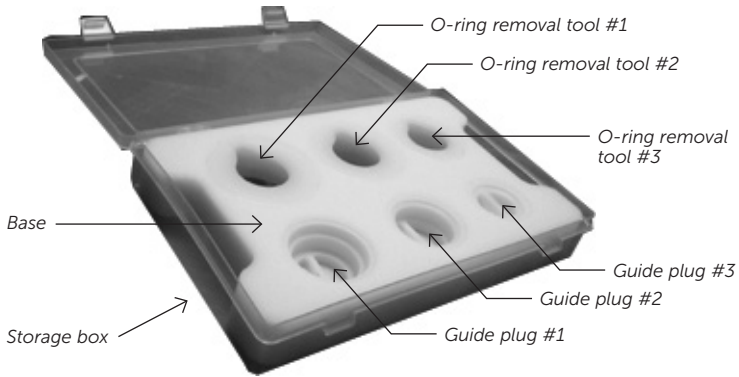

O-RING REMOVAL

1. Remove base from storage box.
2. Attach o-ring removal tool #3 to dispense head by sliding from the side and over the bottom o-ring (smallest).



Figure 1.

3. Pry o-ring removal tool #3 from closed side and o-ring will come off dispense head.



Figure 2.

4. Remove o-ring from the o-ring removal tool with your thumb.



Figure 3.

5. Repeat steps 2-5 using o-ring removal tool #2 to remove the middle o-ring and o-ring removal tool #1 to remove the upper (largest) o-ring.
6. Proceed to o-ring installation.

O-RING INSTALLATION

1. Remove guide plugs #1, #2 and #3 and set adjacent to their storage spaces.
2. Place new #1, #2 and #3 o-rings in their corresponding counter bore on the tool kit base.



Figure 4.

3. Set the #1, #2 and #3 guide plugs on top of the corresponding o-ring in base.

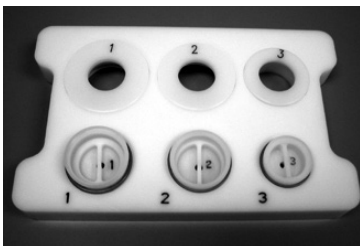


Figure 5.

4. Set dispense head on top of guide plug #1.



Figure 6.

5. Using two hands, push straight down until o-ring snaps into place.
6. Lift. The o-ring has been installed.



Figure 7.

7. Repeat steps 4-6 for o-rings #2 and #3.
8. Prior to placing back in the storage box, rinse or clean the tool kit base and components to remove any residual chemical.

FOR MORE INFORMATION

Please call your Regional Customer Service Center today to learn what Entegris can do for you. Visit entegris.com and select the Contact Us link to find the customer service center nearest you.

TERMS AND CONDITIONS OF SALE

All purchases are subject to Entegris' Terms and Conditions of Sale. To view and print this information, visit entegris.com and select the Terms & Conditions link in the footer.



PURE ADVANTAGE

Corporate Headquarters

129 Concord Road
Billerica, MA 01821
USA

Customer Service

Tel +1 952 556 4181
Fax +1 952 556 8022
Toll Free 800 394 4083

Entegris®, the Entegris Rings Design™ and Sentry® are trademarks of Entegris, Inc.

©2006-2017 Entegris, Inc. | All rights reserved. | Printed in the USA | 3560-2426ENT-0517