

# NOWPak® Canister Replacement Liner

*Procedure for properly unpacking and replacing canister liners*

## NOWPak® Replacement Liner Removal Procedure

NOWPak replacement liners can be damaged if not handled properly. This procedure outlines the correct way to remove the liners from the shipping box in order to reduce inadvertent damage.

### TOOLS REQUIRED

Box cutter (A): For use on exterior of carton only.  
Scissors (B): For use on interior sleeve packaging.



Figure 1.

### INSTRUCTIONS

#### Liner removal

1. Make sure the box label is facing up.



Figure 2.

2. Expose box cutter blade no more than 6 mm (0.24").



Figure 3. Correctly exposed box cutter blade.



Figure 4. Incorrectly exposed box cutter blade.

3. Lightly cut through tape along box seams as shown in Figures 5, 6 and 7.



Figure 5.



Figure 6.



Figure 7.

4. Open the box and remove the tie wrap from the bagged liners. DO NOT USE BOX CUTTER.



Figure 8.

5. Remove the liner from the box and hold the liner with the fitment facing downwards.

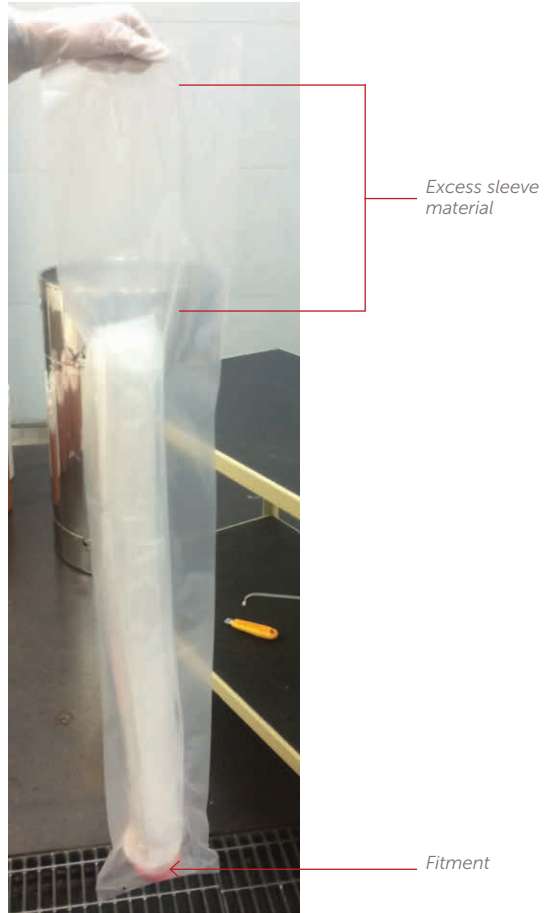


Figure 9.

6. With the scissors, cut approximately 3 mm (0.12") just below the sleeve weld. DO NOT USE BOX CUTTER.

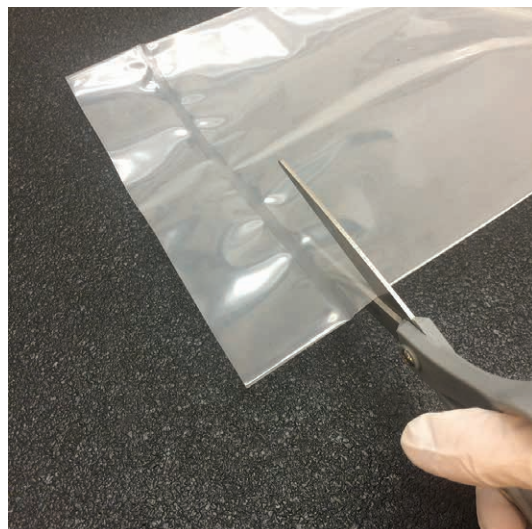


Figure 10.

7. Remove the liner from the sleeve.



Figure 11.

8. Place the liner insertion tool on the neck of the canister, then insert the liner.

**Note:** Do not unfold the liner before inserting.



Figure 12.

#### FOR MORE INFORMATION

Please call your Regional Customer Service Center today to learn what Entegris can do for you. Visit [entegris.com](http://entegris.com) and select the Contact Us link to find the customer service center nearest you.

#### TERMS AND CONDITIONS OF SALE

All purchases are subject to Entegris' Terms and Conditions of Sale. To view and print this information, visit [entegris.com](http://entegris.com) and select the Terms & Conditions link in the footer.



Corporate Headquarters  
129 Concord Road  
Billerica, MA 01821  
USA

Customer Service  
Tel +1 952 556 4181  
Fax +1 952 556 8022  
Toll Free 800 394 4083

Entegris®, the Entegris Rings Design™, Pure Advantage™ and NOWPak® are trademarks of Entegris, Inc.

©2016 Entegris, Inc. | All rights reserved. | Printed in the USA | 7124-8221ENT-1116