

CR8 Pneumatic Valve

Repair instructions

REPAIR INSTRUCTIONS


For CR8 pneumatic valves, including normally closed, normally open and all media end connections

⚠ CAUTION! Never apply pilot pressure to a pneumatic actuator not assembled on a valve body and tightened securely.


⚠ CAUTION! Never attempt to disassemble the actuator. Actuator has compressed springs that could cause injury if released.

⚠ CAUTION! Remove any pressurized sources from the valve before attempting repair.


1. Repair kit contents: actuator assembly, diaphragm and bolt plugs. Consult factory if replacement bolts and lock washers are needed.

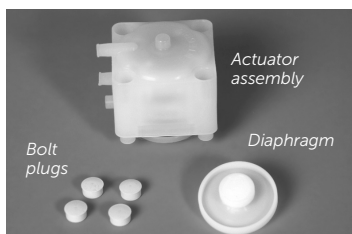

2. Remove four bolt caps and discard. Note orientation of pilot ports with respect to the media ports. In the picture shown, they are parallel and the pilot ports are pointing in the same direction as port 1.

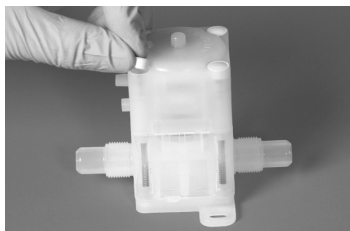


3. Remove four bolts and washers 1/2 turn at a time in a cross pattern as shown (1, 2, 3, 4) with a 5/32" hex key. Save bolts, unless new ones have been purchased separately from the repair kit.

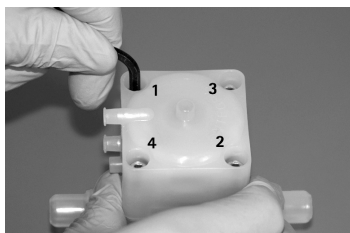

⚠ CAUTION! Point actuator away from personnel for step 4.


4. Apply less than 103 kPa (15 psig) air or nitrogen pressure to port 2, with port 1 capped to separate actuator assembly from the body. Discard actuator assembly and diaphragm after removal.

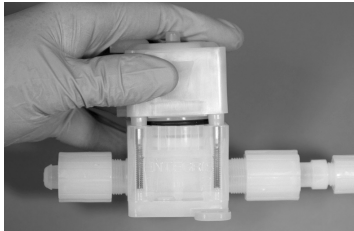


5. Clean the sealing detail within the body by spraying with isopropyl alcohol and drying with clean dry air or nitrogen.

CAUTION! Do not contact the valve body seal detail as it may cause damage.


Inspect the body poppet seat for signs of damage and/or wear. Do not touch the poppet seat. Magnification may be required. If damage is evident, replace the entire valve.

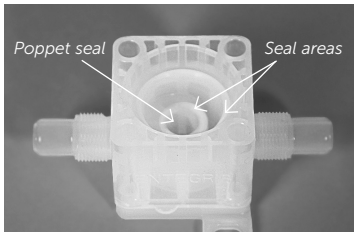

6. Install diaphragm onto actuator assembly by threading it clockwise into the red piston stem thread until it is finger tight.

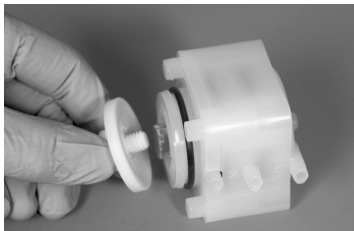


7. Place the actuator assembly onto the valve body with the pilot ports facing in the same direction as noted in step 2. Handle poppet so that seal surfaces are not damaged.

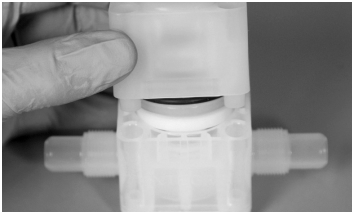

8. Push down on the actuator assembly so that the four bosses enter the holes in the body.



9. Install four bolts and lock washers into the holes in the actuator assembly.

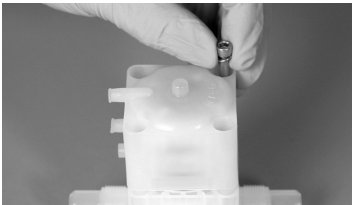


CAUTION IT IS VERY IMPORTANT TO PERFORM THIS STEP EXACTLY AS DIRECTED.


10. Tighten with a torque wrench to 0.11 N•m (1 in•lb) torque in a cross pattern (1, 2, 3, 4). Repeat this step in 0.11 N•m (1 in•lb) increments until 1.02 N•m (9 in•lb) torque is reached.




11. A recommended (but not required) step is to visually check the gap between the body and actuator. It should measure less than 1.1 mm (0.045") and not vary by more than 0.38 mm (0.015"). Use a feeler gauge or caliper to measure the gap at the corners of the valve.

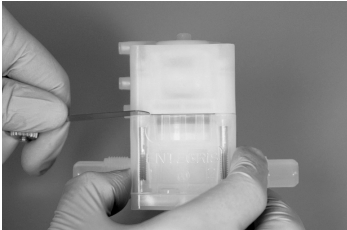


12. Media test. Put a cap on port 1 and apply 552 kPa (80 psig) air or nitrogen pressure to port 2. Attach a tube to the vent port and submerge the other end in water. Wait for 30 seconds and then observe for one minute. No bubbles should be seen in the next one-minute period.

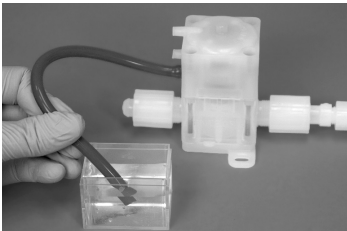

13. Port seal test. Connect 483 kPa (70 psig) pilot pressure to the in pilot port (normally closed valve shown). Connect 552 kPa (80 psig) air or nitrogen pressure to port 2 and apply pressure. Cycle valve five times and leave normally closed valves with pilot off and normally open valves with pilot on. Connect cap with a 1/16" OD tube to port 2 and submerge tube end in water 12 mm (0.5") deep. No leakage should be observed at port over a 60-second period of time.

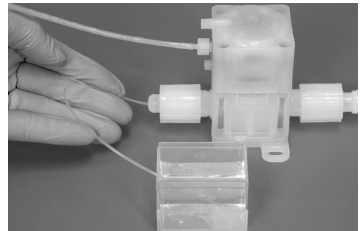

14. Install the caps.

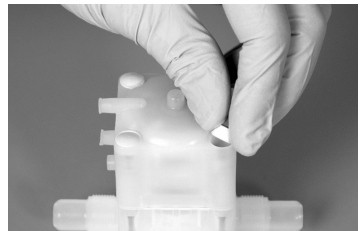

ORDERING INFORMATION

Repair parts kit

DESCRIPTION	QUANTITY
Actuator assembly	1
Diaphragm	1
Bolt plug	4

Customer supplied items

DESCRIPTION
5/32" hex key
Torque wrench capable up to 1.02 N•m (9 in•lb)
5/32" hex driver that fits the customer supplied torque wrench
Isopropyl alcohol
Regulated air or nitrogen supply up to 552 kPa (80 psig)
Feeler gauge set up to 1.1 mm (0.045") or caliper
Flexible tubing with 6.35 mm (0.25") inside diameter or smaller
Standard Flaretek® port connection cap
Port connection cap with a hole in the end that accepts a 1/16" tube that fits tightly

FOR MORE INFORMATION

Please call your Regional Customer Service Center today to learn what Entegris can do for you. Visit [entegris.com](https://www.entegris.com) and select the [Contact Us](#) link to find the customer service center nearest you.

TERMS AND CONDITIONS OF SALE

All purchases are subject to Entegris' Terms and Conditions of Sale. To view and print this information, visit [entegris.com](https://www.entegris.com) and select the [Terms & Conditions](#) link in the footer.



Corporate Headquarters
129 Concord Road
Billerica, MA 01821
USA

Customer Service
Tel +1 952 556 4181
Fax +1 952 556 8022
Toll Free 800 394 4083

Entegris®, the Entegris Rings Design®, and other product names are trademarks of Entegris, Inc. as listed on [entegris.com/trademarks](https://www.entegris.com/trademarks). All third-party product names, logos, and company names are trademarks or registered trademarks of their respective owners. Use of them does not imply any affiliation, sponsorship, or endorsement by the trademark owner.
©2011–2018 Entegris, Inc. | All rights reserved. | Printed in the USA | 3210-6132ENT-0718